

creamsource remote

[quick start guide]

The Creamsource Creamtwist remote allows you to control one or more Creamsource fixtures with the single controller. The 20 sunlight readable LEDs give accurate level indication, and dedicated buttons allow the fixture to be turned on and off, or flashed. If used with a Colour fixture, the Green/Magenta and also Hue/Saturation can also be adjusted.

The remote is plugged into the Creamsource Accessory port. If also using an external Flashbandit sync box, then the remote can be plugged into the spare accessory port on the Flashbandit. If using a Micro or Sky, the Accessory Converter will be needed to adapt the plug to the correct size (part number CSU-ACC-CONV).

To control more than one Creamsource, they can be daisy-chained together with DMX cable between the DMX-IN and DMX-THRU ports.



CONTROLS

POWER	TAP to turn light on and off. Press and HOLD to lock / unlock buttons and wheel
MODE	TAP the MODE button to switch between CCT and HSV modes (colour fixture only) Press and HOLD to switch between normal and individual mode (see below)
COLOUR TEMP	HOLD and use wheel to adjust colour temperature or hue TAP 3 times and HOLD to adjust Green/Mag or Saturation (LED's will flash)
FLASH	TAP to flash light momentarily
CONTROL WHEEL	Use to adjust current setting. Turn fast for rapid changes, or slowly for more precise adjustments

BRIGHTNESS, ON/OFF AND FLASH

The control wheel will control brightness by default, unless the COLOUR TEMP button is held down. To turn the light on/off, press the Power button. The LED ring display will dim when the light is off. To flash the light, press the FLASH button. For best effect turn the light off, then press FLASH.

SWITCHING BETWEEN CCT AND HSV MODES

Tap the MODE button to switch between CCT and HSV modes. One of the two Mode LED's will be on solid, showing the current mode selected:

1. CCT Mode. This gives control of Brightness, Colour Temperature and Green/Magenta balance
2. HSV Mode. This gives control of Brightness, Hue and Saturation

Not all functionality will be available on all Creamsource fixtures

Outsight Pty Ltd

Unit 6, 888 Bourke St, Zetland, Sydney NSW 2017, AUSTRALIA
+61-2-9699 8688

creamsource remote

[quick start guide]

COLOUR TEMPERATURE (CCT Mode)

Hold the COLOUR TEMP button while adjusting the control wheel. The ring display will change to show current CCT, and setpoints are illuminated at 3200K and 5600K.

The adjustable range is from 2200K - 15000K. Not all fixtures can produce the full range

GREEN/MAGENTA ADJUSTMENT (CCT Mode)

Tap the COLOUR TEMP button 3 times in quick succession, Holding the button down on the 3rd tap. The ring display will start to flash quickly. Adjust Green/Magenta using the control wheel. Turn clockwise to add green, turn anticlockwise to add magenta. Two centre LED's will be illuminated to show neutral green/magenta offset.

HUE ADJUSTMENT (HSV Mode)

Hold the COLOUR TEMP button while adjusting the control wheel. The ring display will change to show current Hue, and setpoints are illuminated for primary colours RED, YELLOW, GREEN, CYAN, BLUE, MAGENTA and RED

The adjustable range is from 0-360°. Note this mode only works on Colour fixtures

SATURATION ADJUSTMENT (HSV Mode)

Tap the COLOUR TEMP button 3 times in quick succession, Holding the button down on the 3rd tap. The ring display will start to flash quickly. Adjust Saturation using the control wheel.

INDIVIDUAL MODE - CONTROL TWO UNITS INDEPENDANTLY

This mode allows individual control of multiple Creamsources with the one remote. The DMX address must be set to either 1 or 2 in each Creamsource to use this feature. Multiple Creamsources may share the same DMX address if you want them to be controlled together. Creamsources should be daisy chained together using DMX cable, or via the Accessory port.

Hold the MODE button to switch between NORMAL and INDIVIDUAL modes. When in INDIVIDUAL mode, Mode LED 1 or 2 will begin to flash. Tap the MODE button to switch between Fixture 1 and Fixture 2. Independent levels and colour settings can be set using the wheel, and adjusted as needed.

To return to NORMAL mode, Hold the MODE button again until the Mode LED stops flashing. Note it is not possible to have CCT on one fixture and HSV on another.

LOCKING THE BUTTONS AND CONTROL WHEEL

Hold the Power button down for 2 seconds to lock the buttons and control wheel. The Mode 1 LED will 'ping' to show that the unit is locked, and the ring display will pulse. Hold the Power Button again to unlock.

Can't access HSV mode, or extended colour control?

If you have an older remote, it may not support this feature. Contact Oversight to arrange for a firmware upgrade.

Oversight Pty Ltd

Unit 6, 888 Bourke St, Zetland, Sydney NSW 2017, AUSTRALIA
+61-2-9699 8688